

# ROCK SHOW<sup>TM</sup>

## SOUND AND LIGHT SYSTEM

 
## VENUE

### FOR USE WITH:

Interactive Music Games  
Ipod® device or other MP3 player  
Computers  
Handheld Video Games  
DVD or CD player

### OR USE AS:

Real Live Instrument Amplifier  
PA System  
Karaoke Machine  
Desk or Shelf Speakers

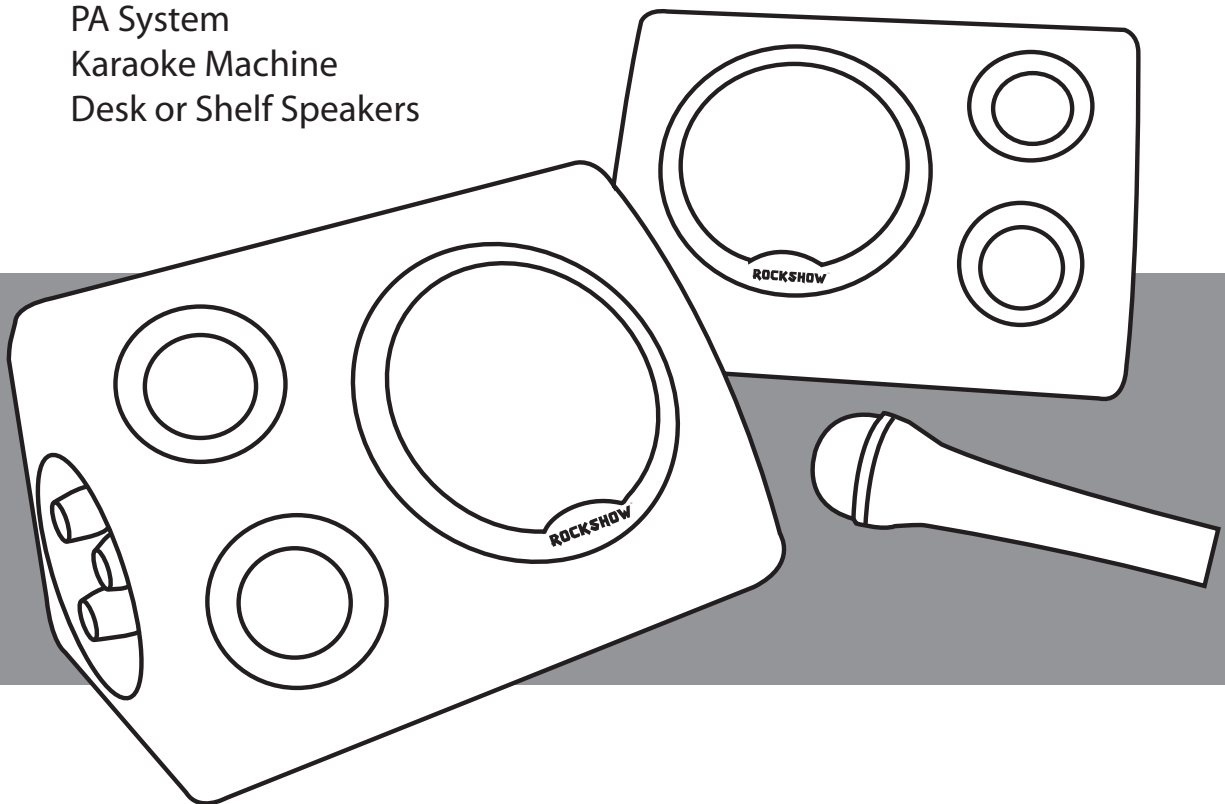

LumiSource Inc.

# ROCK SHOW™

## QUICK CONNECTIONS:

- Ipod®, MP3 player, or Audio Device ..... See page 4
- Television ..... See page 5
- DVD Player ..... See page 5, Option 2 OR Option 1 to TV
- Interactive Music Video Games ..... See page 6, Option 3 OR 4
- Computers ..... See page 4 (portable audio device)
- Handheld Video Games ..... See page 4
- Use as a Real Live Instrument Amplifier... See page 6
- Use as a PA System ..... See page 4 Basic Set Up for MIC
- Use as a Desk or Shelf Speakers..... See page 4 OR Option 1 or 2 (page 5)
- Use as a Karaoke Machine..... Insert MUSIC CD/DVD (not included) & Connect using Options 1 or 2 (page 5)

## CAUTIONS

### READ BEFORE USE

- Strictly for Indoor Use.
- DO NOT expose to direct sunlight, rain, moisture, water, or extreme temperatures.
- DO NOT expose to flame or excessive heat.
- Turn power off when not in use.
- RECOMMENDED FOR AGES 13 AND UP - This product is not a toy and should not be used by children. Adult supervision required for setup and play.
- Excessive exposure to audio equipment at high volume may lead to hearing loss.
- DO NOT Tamper with or open the product.
- DO NOT place the Rock Show™ speaker units closer than 12 inches from your computer monitor or television. The magnetization of the speakers may cause permanent distortion damage to your monitor or television.

This device complies with Part 15 of the FCC Rules

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme a lo nomre NMB-003 du Canada

 
Caution: To reduce the risk of electric shock and fire, do not open the Rock Show™ units. There are no user serviceable parts inside. Refer to your warranty for service information and page 7 for troubleshooting.



*Internal*

## SET-UP GUIDE

### PARTS LIST:

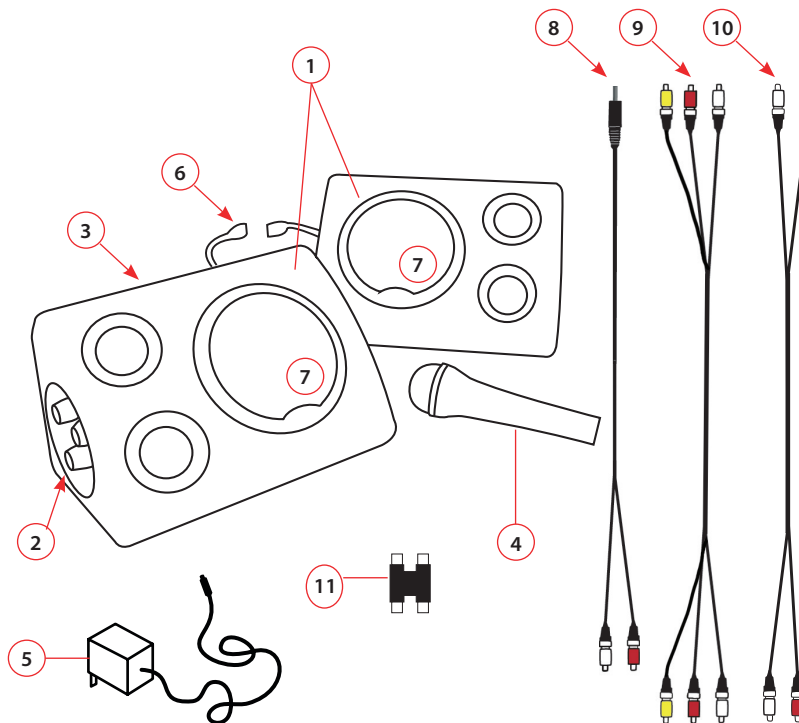

- 1) 2x ROCK SHOW™ UNITS WITH LED LIGHTS
- 2) SIDE CONTROL PANEL
- 3) BACK CONTROL PANEL
- 4) 1 MICROPHONE
- 5) 12V AC POWER ADAPTER
- 6) UNIT CONNECTOR CORDS
- 7) 2x 5 in. (12.7 cm) SPEAKERS
- 8) RCA TO MINI AUDIO CORD
- 9) RCA AUDIO/VIDEO CORD
- 10) RCA AUDIO CORD
- 11) RCA AUDIO COUPLER


THE ABOVE NUMBERS WILL BE USED FOR REFERENCE ON THE FOLLOWING PAGES

*NOTE: Gaming microphones with USB connections must be connected directly to their respective game consoles.*


## CONTROL PANELS - QUICK REFERENCE

 One of your Rock Show™ speakers will have these control panels to adjust the sound, microphone, and lights for both units.

### SIDE PANEL

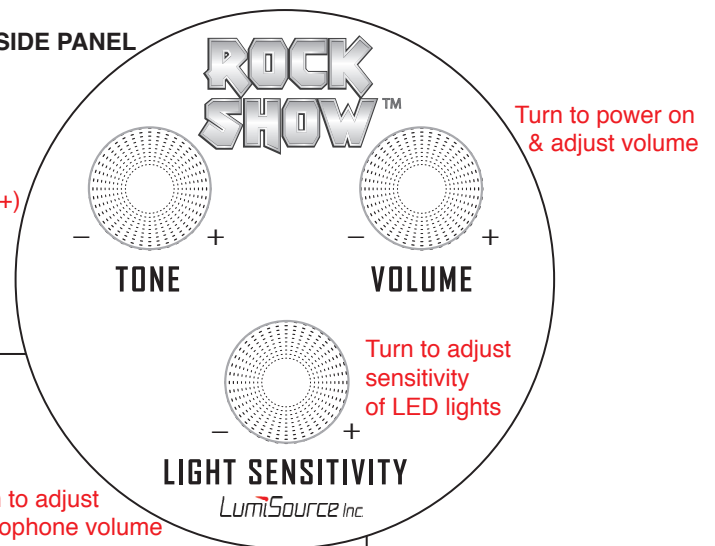

### BACK PANEL

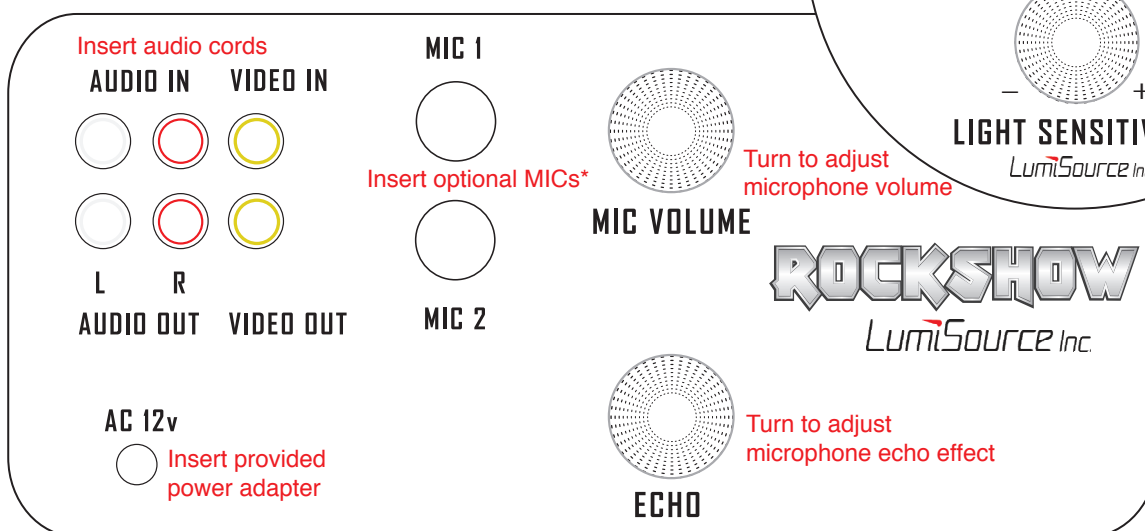 

\* Only one MIC is provided with Rock Show™


## BASIC SET UP

 Step 1: Connect the two Unit Connector Cords (6).


Step 2: Plug in provided adapter (5) as pictured.\*

Step 3: Connect to audio source using one of the connection methods described in this manual.

Step 4: Connect microphone cord if needed. Plug in 1 or 2 microphones to sing along.\*\*

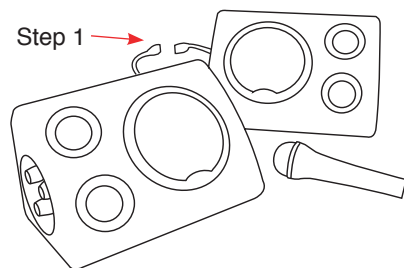

 Step 2

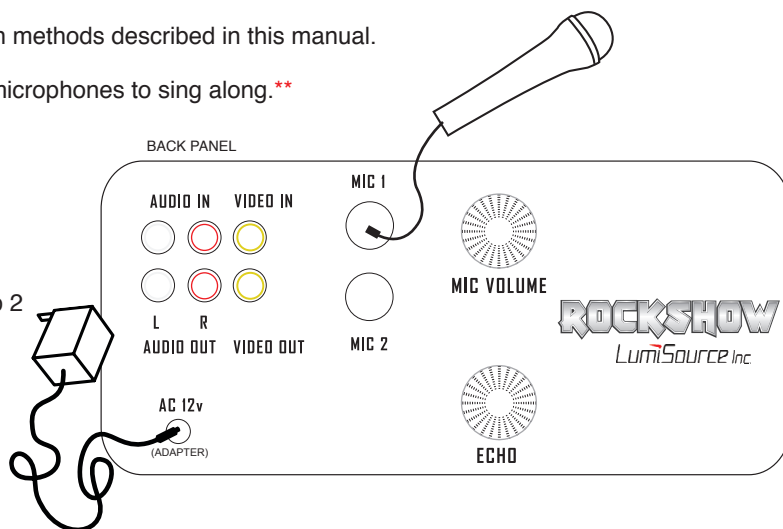

\* **CAUTION:** Use **ONLY** provided adaptor! Different voltage may cause permanent damage.

\*\* **CAUTION:** DO NOT place microphone directly in front of speakers. Feedback will occur.

**NOTE:** Gaming microphones with USB connections must be connected directly to their respective game consoles. The Rock Show™ mic. is not programmed to control elements of the game.

## CONNECTING TO PORTABLE AUDIO / VIDEO DEVICES

 
Step 1: Connect the Red/White ends of RCA to MINI cord (8) into AUDIO IN of Rock Show™.

Step 2: Plug the single end of the RCA cord (8) into the headphone jack of your device.


Step 3: Turn Rock Show™ on by turning Volume knob clockwise.

Step 4: Turn on portable device and turn up the volume.

Step 5: (optional) Plug in 1 or 2 microphones to sing along.

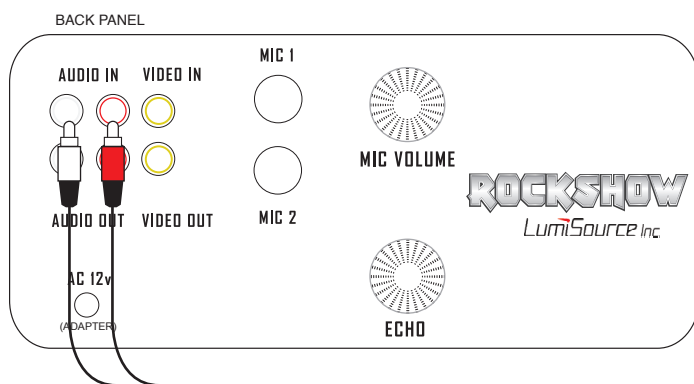

headphone jack

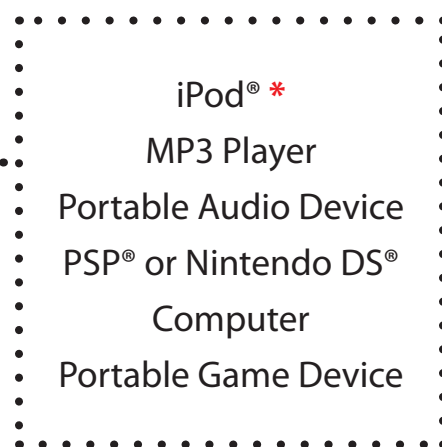 

\* **Note:** Some Apple™ devices such as iPhone™ or iTouch™ require special 1/8 in. (3.5 mm) TTY adapter (sold separately)

## CONNECTING TO TV, DVD, OR GAME CONSOLE

### OPTION (1) CONNECT DIRECTLY TO TV

 
This is an easy connection if you already have your TV hooked up to a DVD or game console or are using an HDMI cable.

Step 1: Connect the ends of RCA cord (10) into AUDIO **OUTPUT** of television.

Step 2: Connect the other ends of the RCA cord (10) into AUDIO IN of Rock Show™.

Step 3: Turn Rock Show™ on by turning VOLUME knob clockwise.

Step 4: Turn on Game Console/DVD and TV and turn up the volume.

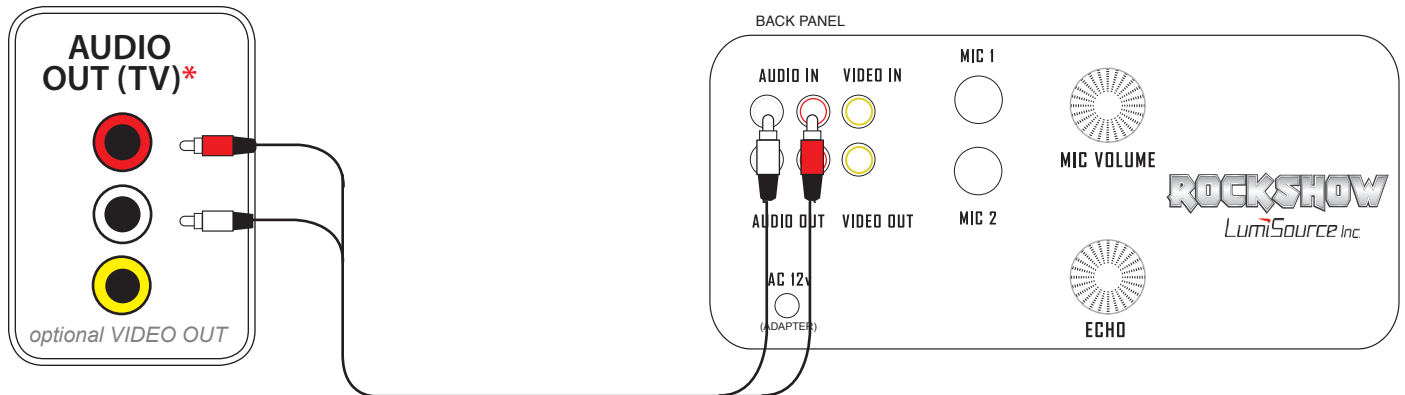

*\* If your TV does not have an AUDIO OUT, please use one of the following Connection Options.*


### OPTION (2) CONNECT DIRECTLY TO DVD PLAYER

 This is an easy connection if your television does not have an AUDIO OUT or if you want to use multiple units together.

Step 1: Connect the one end of the Red/White/Yellow RCA cord (9) into your DVD player,

Step 2: Plug the yellow RCA Cord (9) from DVD player into video input of TV.

Step 3: Plug remaining Red/White RCA cord from DVD player into AUDIO IN of Rock Show™.

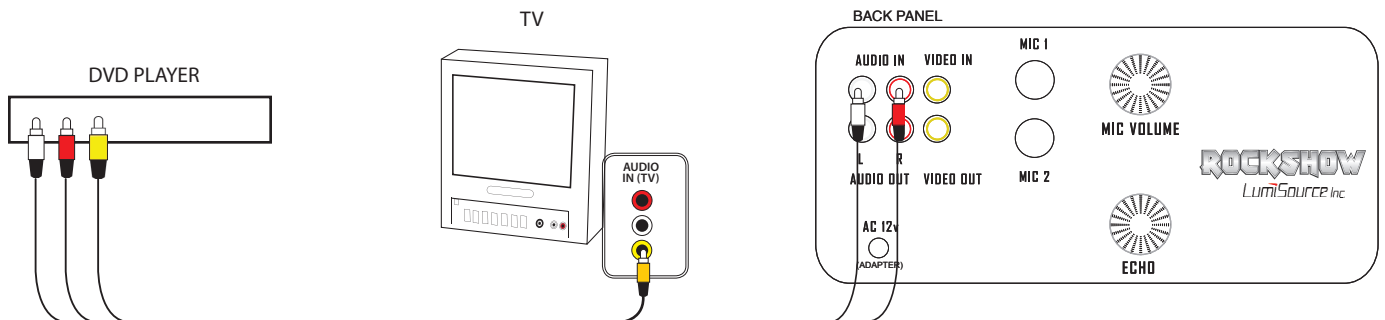

***\*Note:** If you would like to extend Rock Show™ farther away from your TV, please use the included RCA Audio Coupler (11). You will connect the red and white ends of the two provided RCA cords through the coupler without changing any other connections described in Connection Options 1, 2, or 3.*


## CONNECTING TO VIDEO GAME CONSOLE
 
### OPTION (3) CONNECT DIRECTLY TO GAME CONSOLE

This is an easy connection if your television does not have an AUDIO OUT or if you want to use multiple units together.

Step 1: Using the special RCA cord that comes with your video game console, plug yellow RCA cord from game console into video input of TV.

Step 2: Plug Red/White RCA cord from game console into AUDIO IN of Rock Show™.

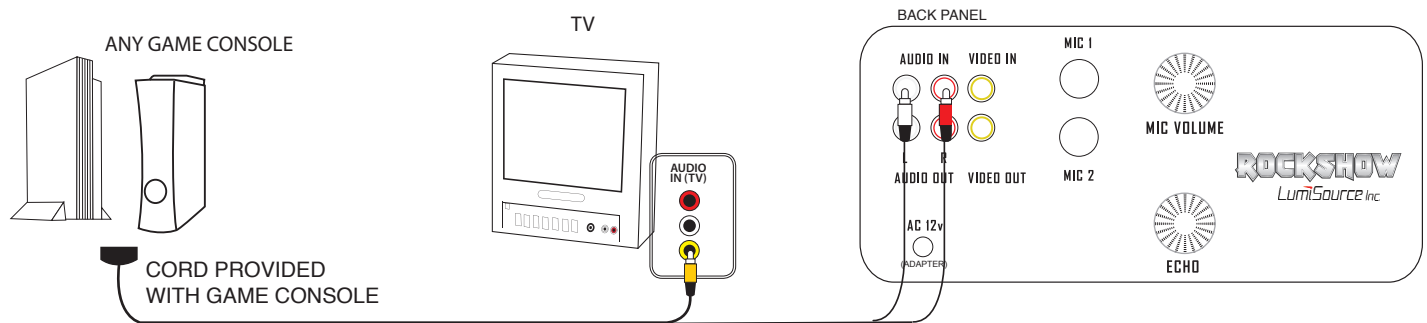


### OPTION (4) CONNECT DIRECTLY TO GAME CONSOLE

This connection allows you to use Rock Show™ as a bridge so that sound will still come out of your TV AND Rock Show™.


Step 1: Using the special RCA cord that comes with your video game console, plug RCA cords into Rock Show™ AUDIO IN.

 Step 2: Plug Rock Show™ RCA cord into AUDIO OUT of Rock Show™ and connect opposite ends into TV input jacks.

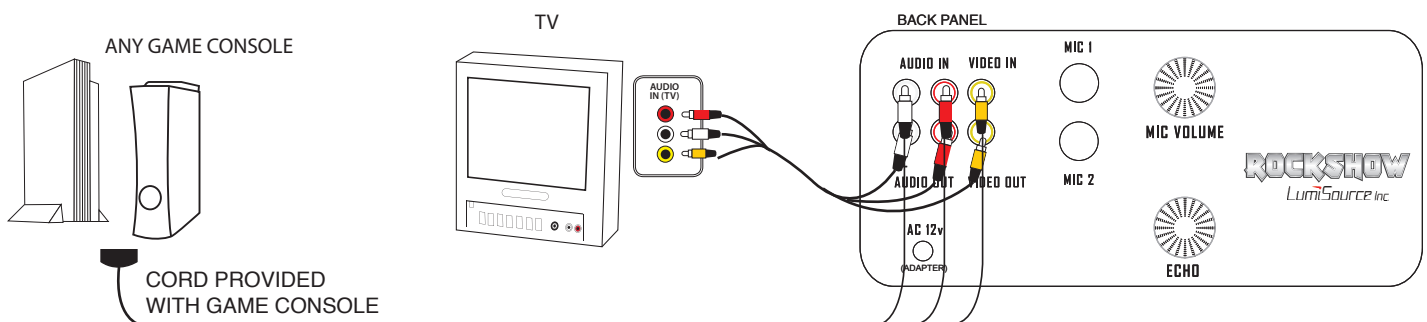

## CONNECTING TO REAL INSTRUMENTS

Step 1: Use a 1/4" instrument cord (not included) to link Guitar, Keyboard, or other instrument's AUDIO OUT with one of the Rock Show™ MIC jacks. You can plug 1 or 2 microphone into either MIC jack as well to sing along.

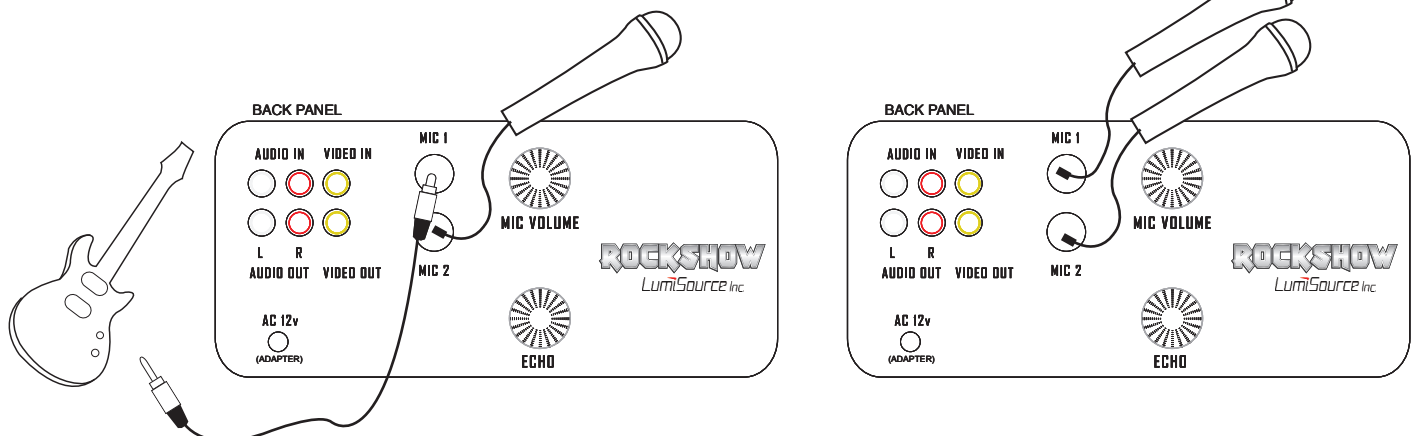


## USING MULTIPLE UNITS TOGETHER (DAISY CHAINING)

It's even more fun to link multiple units together for an **ULTIMATE ROCK SHOW!** Here's how you can link up to 4 pairs:

Step 1: Connect RCA cord from audio source to AUDIO IN on Rock Show™ using one of the previous methods.

 Step 2: Connect the two main units using additional RCA cord from the AUDIO OUT of First Rock Show to the AUDIO IN of second Rock Show™.

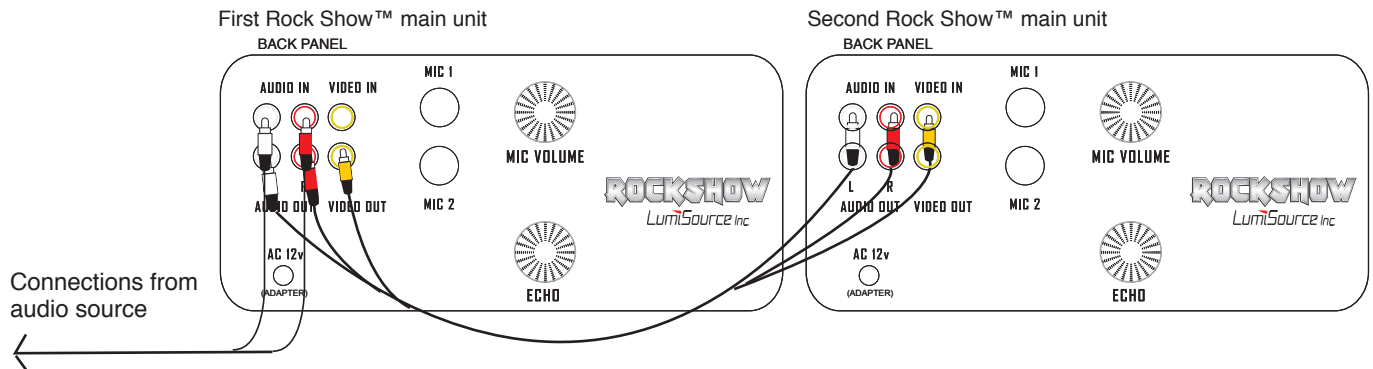

## TROUBLESHOOTING ROCK SHOW™

Q: Why isn't there sound coming from any of my speakers?

A: Ensure Rock Show™ is connected as described in the Setup Guide. Check that the power to the unit is on and the volume is turned up. Also, make sure your audio device is not set to "MUTE" and volume is turned up.

Q: Why isn't there sound coming from one of my speakers?

A: Make sure that both the left and right channel audio inputs are securely connected to Rock Show™ and the audio device. Also, make sure the Unit Connectors are securely connected to link the two speakers.

Q: What if I want to move my speakers farther away from the television?

A: This is why we provide the RCA audio coupler. You will connect the red and white ends of the two provided RCA cords through the coupler without changing any other connections described in Connection Options 1, 2, or 3.

Q: Why doesn't my microphone control the singer in Rock Band®?

A: Gaming microphones with USB connections must be connected directly to their respective game consoles. The RockShow™ mic. will still work with Rock Band®, but is not programmed to directly control elements of the game. Therefore, you should just connect your USB mic. to your game console as usual and then connect Rock Show™ using one of the methods in this manual.

Q: Where can I get more information?

A: Visit us at [www.BOOMCHAIR.com](http://www.BOOMCHAIR.com) or [www.LumiSource.com](http://www.LumiSource.com)

Contact information: LumiSource, Inc. 2950 Old Higgins Road, Elk Grove Village, IL 60007

E-mail: [customerservice@lumisource.com](mailto:customerservice@lumisource.com)

Please give us a call or e-mail before returning the item to a retailer.

## MAINTENANCE AND REPAIR

If a problem occurs while using this product, please contact us. **DO NOT** open unit or attempt to repair on your own. It may result in serious injury from electric shock and void your product warranty.

## LUMISOURCE, INC. LIMITED WARRANTY

**LIMITED WARRANTY:** LumiSource, Inc. ("LumiSource") warrants this product against defects in materials and workmanship for a period of ninety (90) days from the date of original consumer purchase. If a covered warranty claim is timely made, LumiSource® will, at its sole discretion: (a) repair the product, using new and/or refurbished replacement parts or (b) replace the product with an identical (or comparable) product, without charge to you other than the initial shipping cost to return the product. LumiSource® will only pay return shipping charges for destinations within the 48 contiguous U.S.A., if the returned product is covered by the limited warranty.

**WHAT THIS WARRANTY DOES NOT COVER:** This warranty does not cover defects resulting from accidents, alterations, unauthorized repair, failure to follow instructions, misuse, commercial use, fire, flood, or acts of God.

**WHAT WE ASK YOU TO DO:** If there is a covered defect, please write or email us within 90 days of the date of purchase at the address noted below to obtain instructions and authorization to return the product to LumiSource®. You will need to pack the product securely in packaging providing at least the degree of protection of the original carton and packing materials and ship it to us at your expense. You will also need to include with the product (a) a copy of your original proof of purchase (retail receipt) showing the date of purchase and (b) a detailed explanation of the problem(s) requiring service.

TO THE EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE EXTENT PERMITTED BY LAW, LUMISOURCE® HEREBY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT APPLICABLE STATE LAW EXCLUDES SUCH DISCLAIMERS, THEN TO THE EXTENT ALLOWED BY LAW, THE TIME FOR ANY CLAIMS FOR SUCH IMPLIED WARRANTIES SHALL EXPIRE 90 DAYS FROM THE DATE OF ORIGINAL CONSUMER PURCHASE. TO THE EXTENT PERMITTED BY LAW, LUMISOURCE® IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF TIME, INCONVENIENCE, LOSS OF USE OF YOUR PRODUCT, OR PERSONAL INJURY OR PROPERTY DAMAGE, CAUSED BY YOUR PRODUCT OR ITS FAILURE TO WORK.

This limited warranty gives you specific legal rights. Some states do not allow the exclusion or limitation of incidental or consequential damages, and applicable law may not permit the exclusion of certain implied warranties. You may also have other rights, which vary, from state to state.

*LumiSource Inc.*

2950 Old Higgins Road, Elk Grove Village, IL 60007

E-mail: [customerservice@lumisource.com](mailto:customerservice@lumisource.com)

Phone: 1-888-461-5864 (toll free)

Phone: 1-847-699-8988 (international)

[www.BoomChair.com](http://www.BoomChair.com) • [www.LumiSource.com](http://www.LumiSource.com)

© 2009 LumiSource, Inc. All rights reserved. Rock Show™, the Rock Show™ logo along with BoomChair® are trademarks of LumiSource, Inc. The design of this product is a trademark of LumiSource, Inc. Patents pending. Actual contents may differ slightly from those pictured.

This product is not manufactured, distributed by, or affiliated with Microsoft® the owner of the trademark Xbox®, Nintendo® the owner of the trademark Wii® GameCube® and DS®, Sony® the owner of the trademark Playstation® PS3®, PS2®, and PSP®, Apple Computer, Inc the owner of the trademark iPod®, Activision Publishing, Inc. the owner of the trademark Guitar Hero®, or Harmonix Music Systems, Inc. the owner of the trademark Rock Band®. All Rights Reserved.